

## How to assemble Stromme Combi-Jet tripod




The Combi-Jet is delivered in a complete package including couplings, air and water hoses, hatch protection and a complete set of Stromme tripod (see photo).

The portable and easy to install tripod allowed a single person to carry and set up the tripod in the cargo hold that needed to be clean.



Unpack the tripod set, the complete parts is shown in the photo.

The breakable wheels that let the tripod to move around easily and station by engaging the brakes on the wheels are pre-installed.

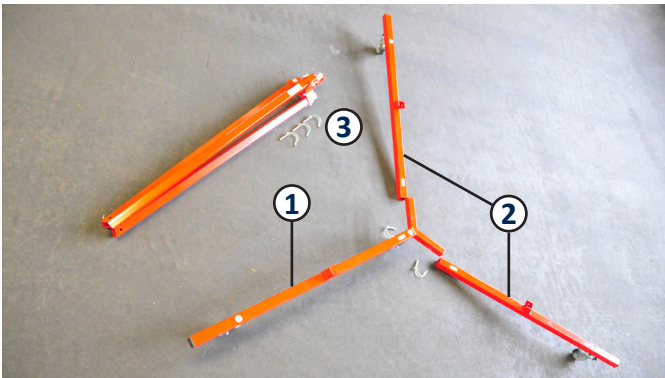

Place the Y-Piece (1) on the floor with the tripod location hole uppermost. Insert the legs (2) with the 9 mm holes at the end of the legs nearest the Y-Piece and with the tripod location holes uppermost. Secure using two of the 8 mm pins (3) and close the retaining clips. Insert the tripod legs one at a time into the location hole and secure with the 8 mm pin, close the retaining clip.



Photo shown complete assembled Stromme tripod with Combi spray gun together with couplings, air and water hoses.